

GW6 118mm cartridge - Fitting and Maintenance

Simple, effective and easy to maintain.

Fitting

- Remove the existing waterless urinal cartridge
- Clean the waste drain
- Carefully push the GW6 cartridge into place until level with the surface of the urinal.

Cleaning

- Clean urinal as normal
- Tolerant of standard cleaning chemicals. Using mild chemicals will extend the life of the valve but products containing 10% phosphoric acid are acceptable. Use of chlorine/bleach, strong acids and strong alkalis should be avoided.

Waste pipe maintenance (optional)

- To keep the waste pipes clear for the long term, it is recommended to pour warm water with a cleaning agent down the urinal every 2 to 4 weeks. Use of chlorine/bleach, strong acids and strong alkalis should be avoided.

Replacing the GW6 valve core

- After 6 months, or when odour is noticeable, the GW6 valve core needs replacing
- With a screwdriver, unscrew the stainless steel cap
- By hand, unscrew the used GW6 valve out of the GW6 cartridge housing
- Clean the waste drain
- By hand, screw the new GW6 valve into the GW6 cartridge housing

