

FITTING GUIDE

Model: **GW6** *Sahara*

Material: glass-fibre reinforced plastic

Prior to Fitting


If the *GW6 Sahara* is being fitted to waste pipes that have been flushed with water, it is strongly recommended that the pipes are thoroughly descaled to the stack pipe connection. For best results, the *GW6 Sahara* should not share waste pipes with sinks or other services that use water.



Fitting Guide

1. Mount bracket at the required height (usually 815mm to hole centres).
2. Place the urinal against the wall and slide down over bracket.
3. Connect the waste pipe to the 1.5" BSP compression fitting
4. Apply silicon sealant around the edge of the urinal, between the urinal and the wall.

DO NOT FIT A TRAP OR U-BEND ! IT IS NOT REQUIRED FOR A GW6 URINAL AND MAY IMPEDE PERFORMANCE.

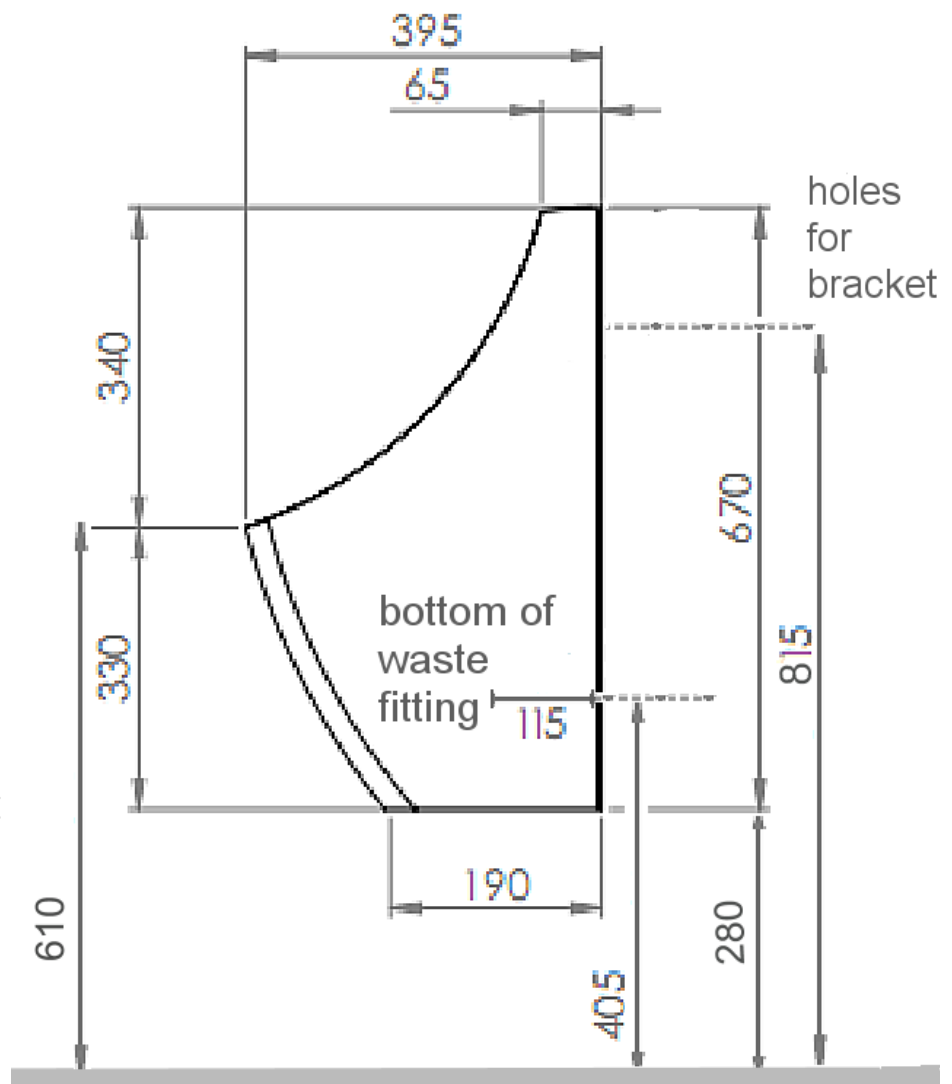

Gentworks